


Cooper Stone Natural Thin Veneer™

Laticrete Example: over Concrete or Concrete Block

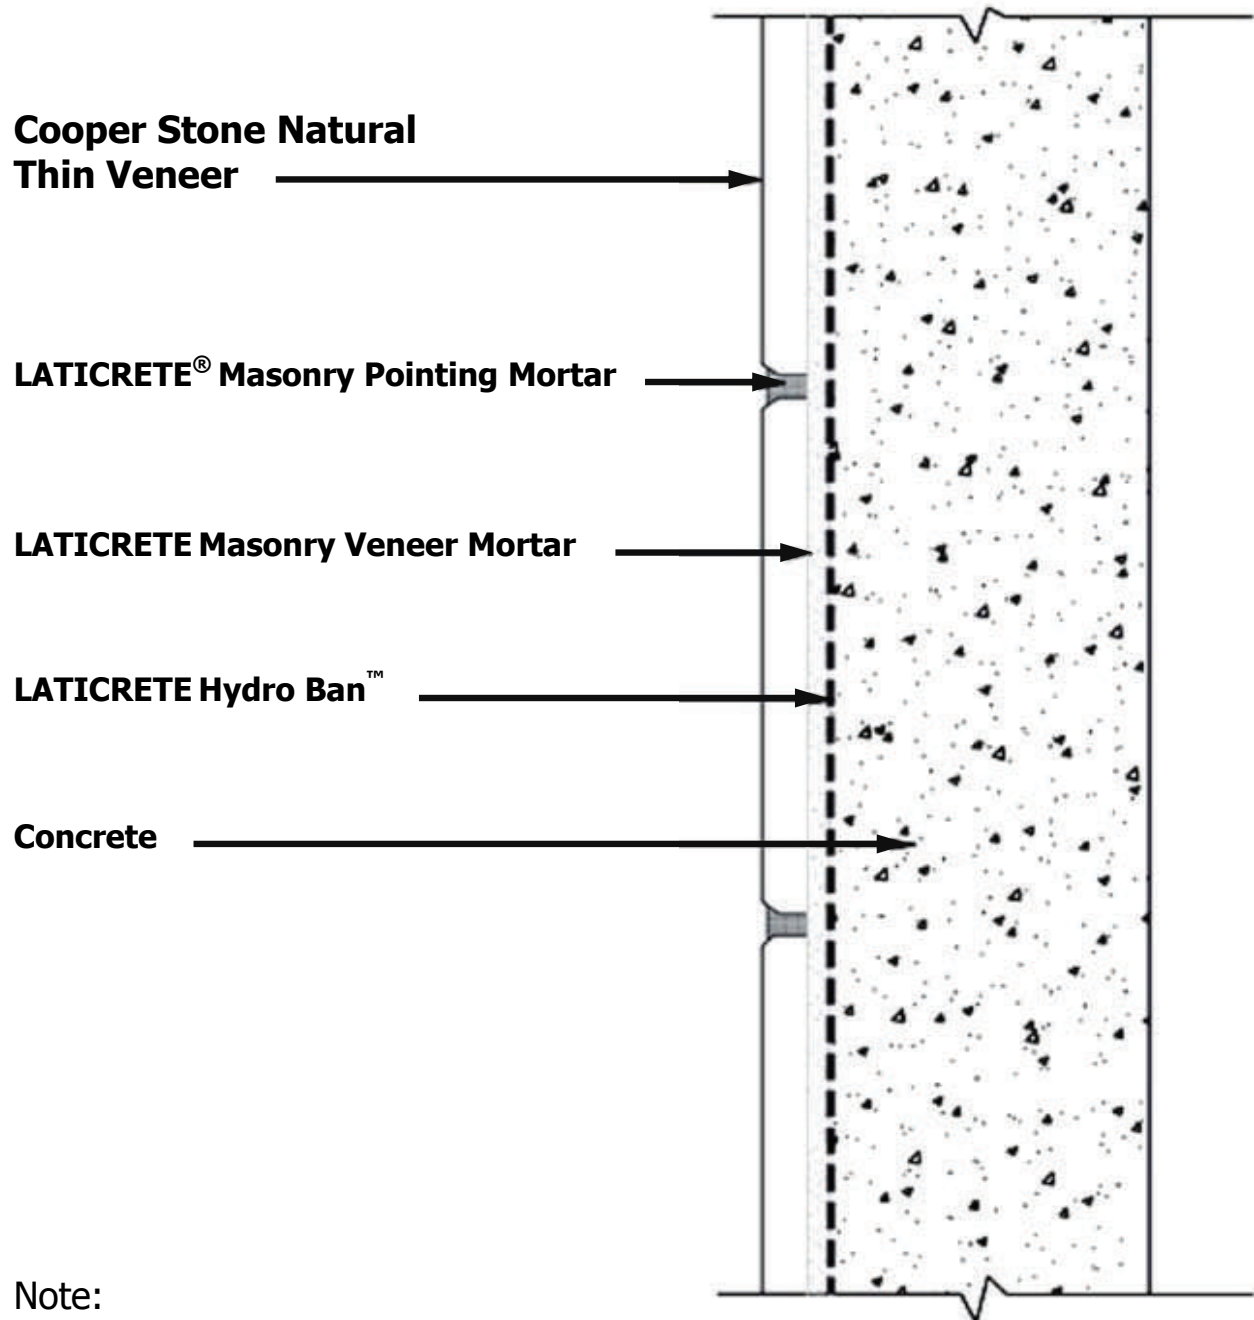

Note:
Vapor Barrier and Insulation-
Type/Location to be determined by Design Professional