


Cooper Stone Natural Thin Veneer™

Laticrete Example: Concrete Backer Board over Wood or Steel Studs

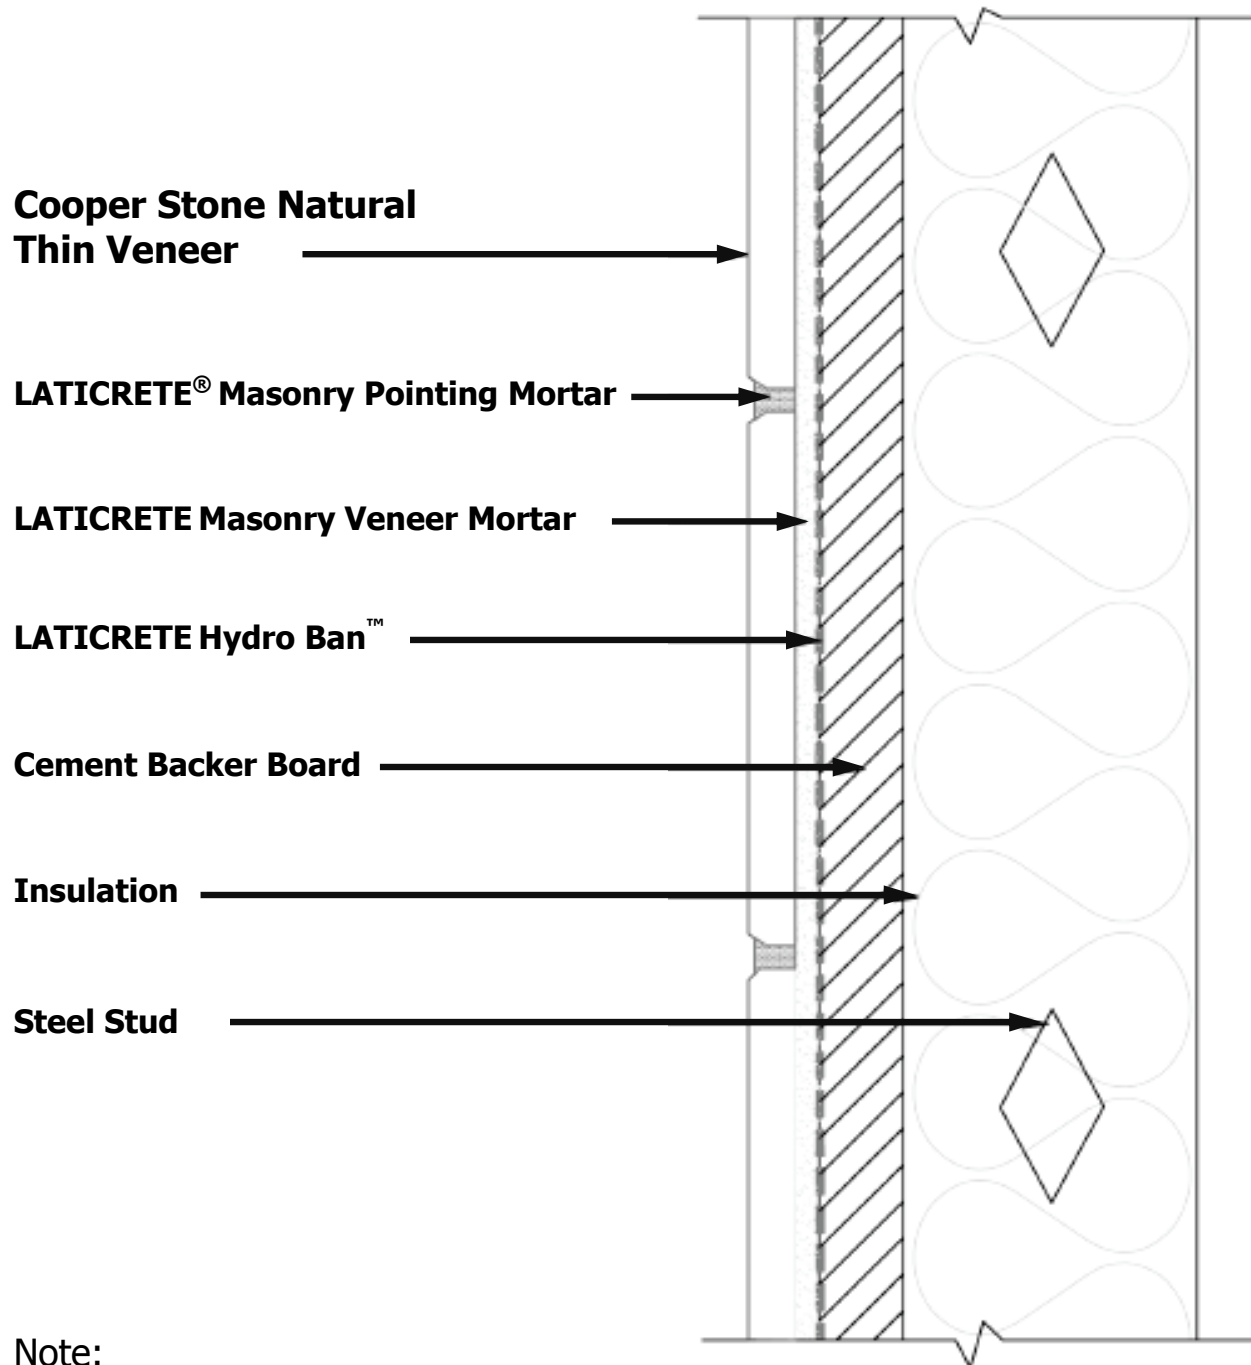

Note:

Vapor Barrier and Insulation-

Type/Location to be determined by Design Professional